

The Nero Dual Programmer APP

Before APP detect the D2SUN



After APP detected D2SUN online, just need connect the D2SUN chip



Click "START" , to burn the D2SUN chip



Start to burn the D2SUN SPI FLASH automatic after ACTEL chip was burned complete



All done! You can test your new D2SUN now!

The Nero Dual Programmer



When it connect to PC USB and link success then RED LED will turn on



When it have data transmit, the BLUE LED will flashing

